

RAPPA




HANDBOOK WEIGHCRATE



COMPONENTS

Before starting, unpack your crate and check all the components listed below are present and undamaged.

We recommend reading the instructions in full or watching the assembly video before starting to familiarise yourself with the build process. Scan the QR code (right) to watch the video.

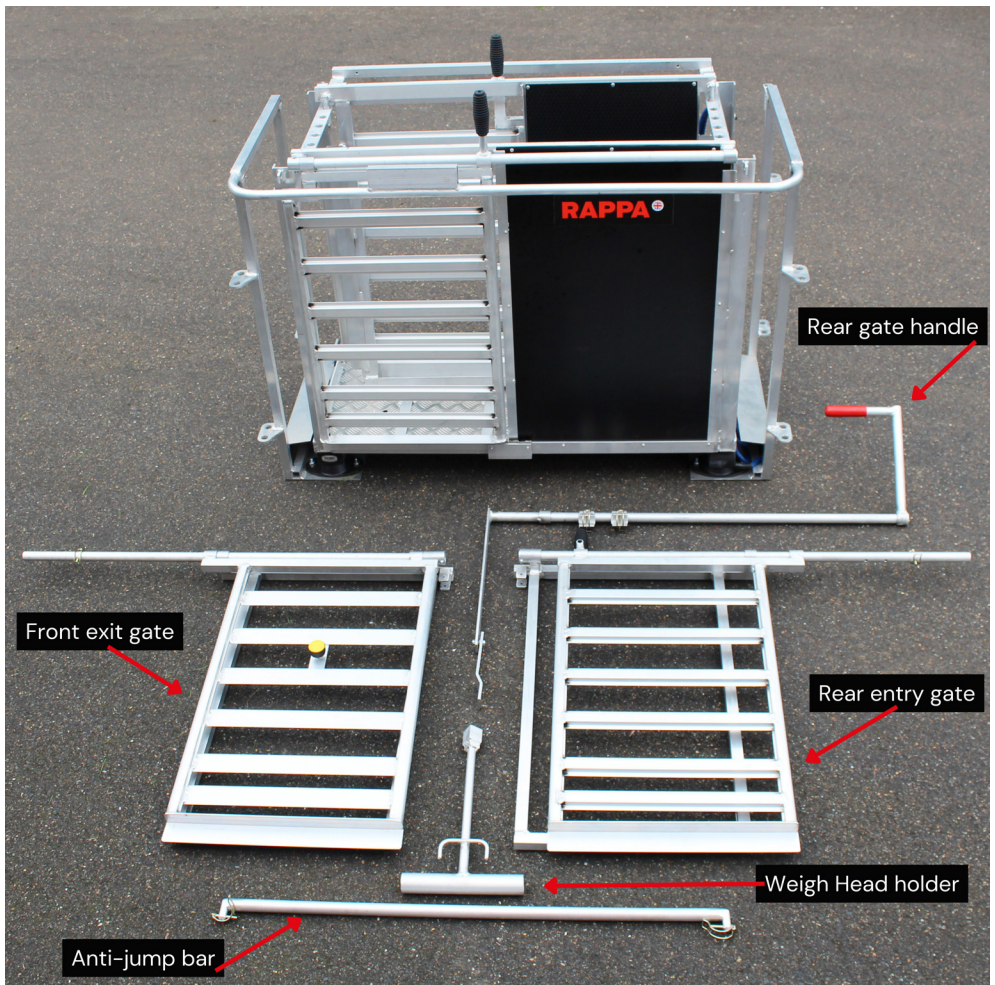

FITTING

1. Start by slotting the rear entry gate onto the inner frame.

Make sure it sits behind the gate guide - as shown below



Don't forget to secure it with the linch pin.



2. Do the same on the opposite side, placing the front exit gate - with the yellow knob on the outside - over the inner frame. Slot inside the gate guide and clip on the linch pin.

3. Add the rear gate handle onto the outer frame at the back, making sure that the elbow sits over the top - circled in the image (right).

Secure with linch pins at both ends.



FITTING


4. Lock the arm into place by screwing in the yellow knob.



Note the
gate arm
position:

Over the
exit gate
bar.

In between
the outer
frame and
the exit
gate.

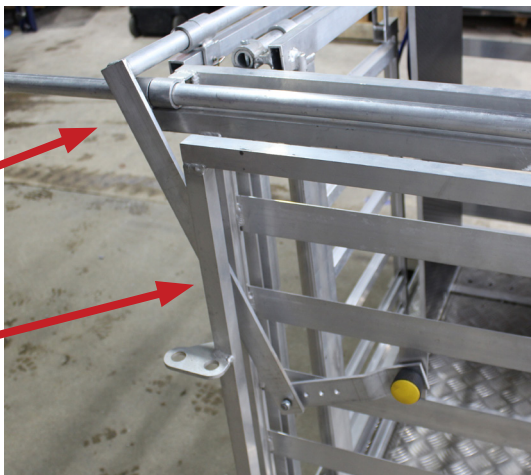

FITTING


5. Slot the anti-jump bar into your preferred position and secure with linch pins. You can adjust this depending on how wide/narrow you set your WeighCrate.



6. Put the weigh head stand into its slot.

Most types of weigh head will fit onto the stand. Note that your Weigh Head will need to be compatible with Tru-Test load bars.

Contact us for advice - 01264 810665.

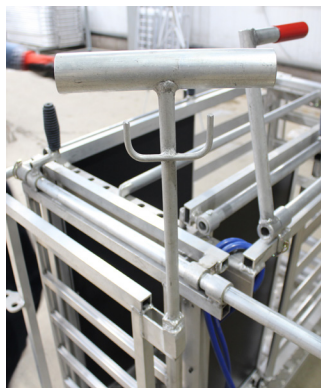

7. Open and close all the gates to check that they are all working smoothly.

The WeighCrate attaches to hurdles or panels to allow for up to three-way drafting.



It's compatible with all the Rappa Mobile Yard series and any fixed yard set-up. Suitable for all sheep - any breed or age.



rappa.co.uk - make the job easier



@rappaltd



@RappaFencing



facebook.com/RappaLtd

Rappa Fencing Ltd

Steepleton Hill | Stockbridge | Hampshire | SO20 6JE

01264 810665 | sales@rappa.co.uk | rappa.co.uk